UIUC

(MEB 2051)

Touch Panel Instructions

This document contains screen captures and descriptions for the AMX touch panel ("panel") design for the "Mechanical Engineering Building Room2051".

Revision Notes

- Rev0 (05/11/2020)
 - Original revision.

Provided by:	
C.V. Lloyde Audio Visual 702 West Killarney St. Urbana, IL 61801	
(800) 779-7031	

Wechanical Engineering Building Welcome to Dept. Classroom 2051 System On

This is the Logo page and is shown when the system is off. The user can start the system with a default source selection.

System Default

By default, the "System On" will turn all displays on and select the "Instructor PC".

Main

mann			
ILLINOIS Mechanical Enginee Building	ring		
Sources		Volume	
Instructor			
PC			
Lanton			mute
Laptop			
Wireless			
WITCHESS			
Document		Display	Mic
Camera		Controls	Controls
Camera		Lighting	Camera
		Controls	Controls
Projector			
Mute		Exit	
		C	

This is the Main page. There are source selections along the left (my room's sources) and a/v controls along the right.

Misc Buttons

Projector Mute Toggle the video mute on the projectors.

Source Selections

Any **source selection** will route the signal as:

- Video will be sent to:
 - monitor on the credenza
 - Both video projectors (the projectors will turn on)
 - Lecture capture unit's content input (Input A)
 - BlackMagic web presenter (web conferencing)
- Audio will be sent to:
 - Overhead speakers
 - Lecture capture unit's content input (Input A)
 - BlackMagic web presenter (web conferencing)
 - Assisted listening system

Instructor PC (Exceptions)

Video routing: With the selection of Instructor PC, the room's camera will be sent to the BlackMagic web presenter for web conferencing. Any other source selection will send that source as content to the BlackMagic web presenter.



The user is always prompted to turn the system off.

YES With my own room, turn off my projectors, reset the audio/video, and return to the LOGO page.

NO or CANCEL Simply return to the previous page.



When the system is turned off, the user is prompted to wait while the equipment is turning off. This delay will generally be the time it takes for the displays to turn off and cool down.

CLOSE The user is able to close this warning, but the delays will continue.

Additional Selections

Display Controls



The additional selection for display controls is a convenience in the event that a projector does not automatically turn on with a source selection.

The projector can take time to warm up and cool down. There are convenient timers provided to show this additional detail for each projector.

Microphone Controls



The additional selection for microphone controls is provided so that the user can adjust the volume of the connected devices.

Wireless Mic #1 Control the volume for the wireless microphone.

Wireless Mic #2 Control the volume for the wireless microphone.

Lighting Controls



The additional selection for lighting controls is provided so that the user can change the lighting scenes in the room.

Camera Controls



The "Lecture Capture" system uses the Extron SMP 352 and allows the user to configure the video being recorded during a classroom session. The user should consider simultaneous "Content" and "Camera" source selections that will be composited into a single layout for recording.

Layout Preset Toggle thru the various layouts defined below. *Note that we have limited the presets for your system to 5, 7, 9, and 10.*

Swap Swap the "Content" and "Camera" windows in the current layout.

Selected Camera Select the camera to be used for the BlackMagic web presenter.

Camera Control Control the rear camera.