


DCL 1265 – Test Kitchen

Turning the System On

- Press the display **[On]** button to turn on the system.
 - This will turn on both the system and the projector.

Using One Wireless Pod

- Press the **[Wireless]** button on the button panel
 - **Wireless pod 1** will be displayed on both TV and the Projector

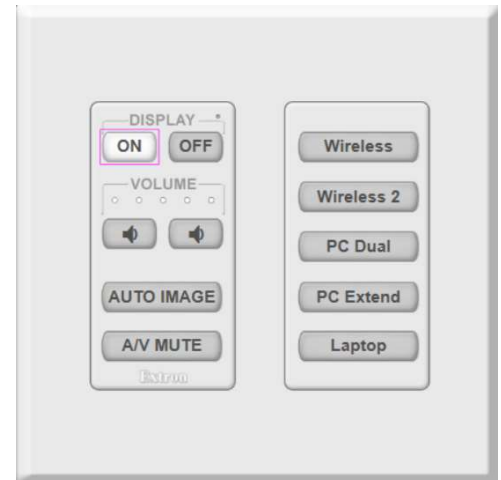

Using Two Wireless Pods

- Press the **[Wireless 2]** button on the button panel
 - **Wireless pod 1** will be displayed on the Projector and **wireless pod 2** on the TV

Resident PC: Dual Mode

- Press the **[PC Dual]** button on the button panel
 - The same image will be displayed on both the TV and the Projector

Resident PC: Extend Mode

- Press the **[PC Extend]** button on the button panel
 - Different images will be displayed on the TV and the Projector

Laptop Mode

- Connect your laptop to the **[HDMI]** cable located on the podium.

Note: Depending on your laptop model, you may need an adapter. Adapters can be borrowed on short term loan (4hrs.) from an Engineering IT Help Desk.

Adjusting Volume

- Use the volume buttons on the button panel:
 - Move to the right for louder volume,
 - Move to the left for quieter volume.

Turning the System Off

- Press the display **[OFF]** button on the top left of the button panel.
 - This will turn off the projector. The TV is intended to stay on.