

## Loomis 464

### \*Turning the System On

- Press the **[SYSTEM ON/OFF]** button on the Control Panel for **three seconds** to turn on the JPK-1300 system.
- The system will initialize, during which the LEDs may flash, indicating that it is starting up. This process should take approximately 30 seconds.

**Note: Only perform this step if the projector and LEDs on the system are completely off.**



Figure 1 - Control Panel

### Turning the Display On

- Once the system is on, press the **[DISPLAY ON]** button to activate connected display devices.
- The displays will take a moment to turn on, depending on their respective start-up procedures.

**Note: The system and displays must be turned on before selecting sources.**

### Using HDMI Inputs

- Press the **[HDMI 1]** or **[HDMI 2]** button on the Control Panel to select the desired HDMI input source.
- Ensure the source device connected to the HDMI input is powered on and functional.

### Using USB-C Input

- Press the **[USB-C]** button on the Control Panel.
- Ensure the source device connected to the USB-C input is powered on and functional.

### Using the Wall-plate Transmitter

- **Connect your source device** to the corresponding input on the Wall-plate Transmitter.
- **Select the input** on the Control Panel or directly on the Wall-plate Transmitter by pressing the corresponding source button (**[HDMI 1]**, **[HDMI 2]**, or **[USB-C]**)

**Note:** Depending on your laptop model, you may need an adapter.

Adapters can be borrowed on short term loan (4hrs.) from an **Engineering IT Help Desk**.



Figure 2 - Wall-plate Transmitter

(217) 333-1313

engrit-av@illinois.edu

<http://it.engineering.illinois.edu>

