

## Siebel Center 3124

### Turning the System On

- Press the **[ON]** button once.
- The buttons will flash for approximately 30 seconds as the projector starts up. You may now select a source (The Apple TV is the default source).

**Note:** The system must be turned on before sources can be selected.

### Using the Apple TV

- If the Apple TV is not already selected, press the **[Apple TV]** button on the control panel.
- To connect your device to the Apple TV, connect to IllinoisNet and from your AirPlay menu select **Siebel 3124**.
- Once you attempt to connect, a 4 digital passcode will be displayed. Enter this on your device when prompted.

**Note:** Pressing the **[Apple TV]** button on the control panel when the source is already selected will send a **[Menu]** command to the Apple TV. This will disconnect any active AirPlay session.

### Using the Microsoft Wireless Display Adapter

- If the Microsoft Wireless Display Adapter (MSWDA) is not already select, press the **[Microsoft Wireless Display]** button on the control panel.
- To connect your device to the MSWDA, press **Windows+P** to open the display open menu. Select **[Connect to a Wireless Projector]** and choose **Siebel\_3124** from the options.

**Note:** If connecting for the first time, you will be prompted to enter a PIN displayed by the MSWDA.

**Note:** Only Windows 8.1 and higher versions of Windows can connect to the MSWDA.


### Using a Laptop

- Connect your laptop to the end of the HDMI or VGA cable that is not connect to the input panel.
- Select the **[HDMI]** or **[VGA]** button on the control panel corresponding to the cable used to connect the laptop.

**Note:** Depending on your laptop model, you may need an adapter. Adapters can be borrowed on short term loan (4hrs.) from an Engineering IT Help Desk.

### Turning the System Off

- Press the **[Off]** button once.
- The buttons will flash for 30-90 seconds as the system shuts down.

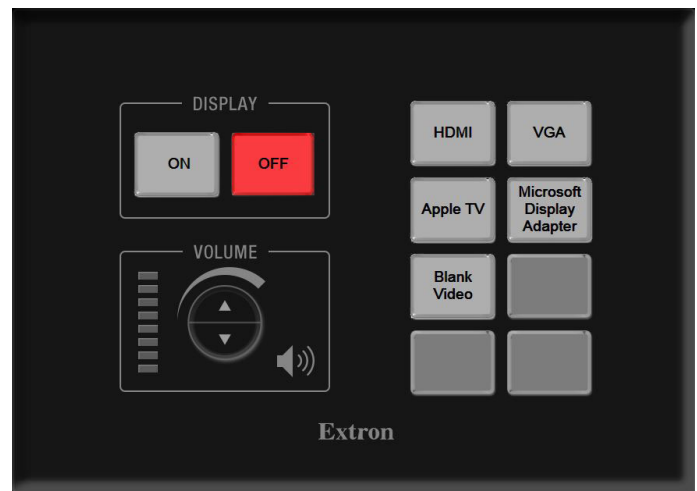

*Control Panel*